


# FT742-SM INSTALLATION

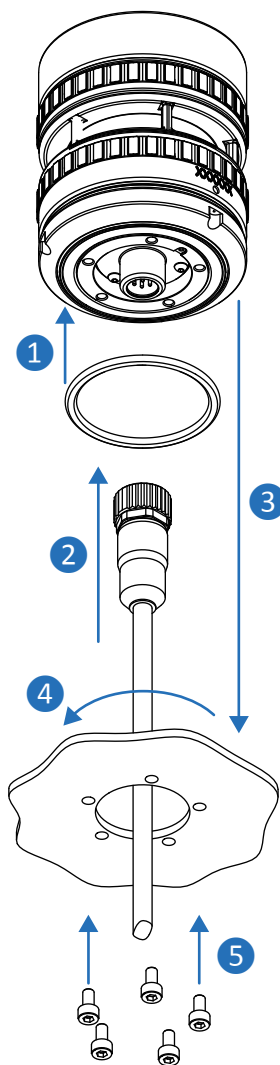

**1** - Apply non-silicon lubricant to the o-ring and correctly position in the base of the sensor.

**2** - Pass the cable through the mounting surface and attach it to the sensor.

**3** - Sit the sensor on the mounting surface and make sure the o-ring is even all around.

**4** - Rotate the sensor to align the mounting holes - note these are not equally spaced.

**5** - Fit and tighten the mounting screws (not provided), ensuring they do not exceed a depth of 5mm into the base of the sensor.

**6** - For more information and guidance on installation in lightning and salt prone areas please consult the product manual.